
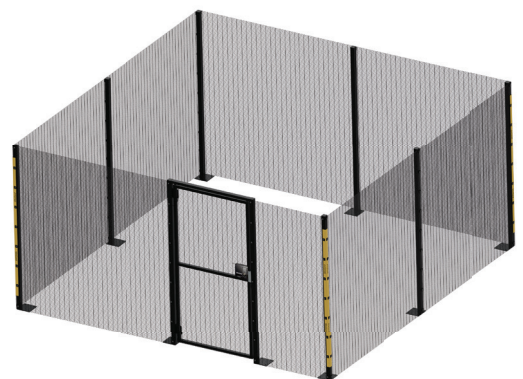


## Installation Instructions

### Tools Required

- Fourtress driver bit (for mesh panel clips, supplied)
- Driver Bit PH3 (for self-closer hinges)
- Flat screwdriver (for self-closer hinge strength adjustment)
- Allen key 6mm (lock and keep installation, supplied)
- Tape measure and level
- SDS drill
- Impact wrench
- M12x160 chem studs with matching socket

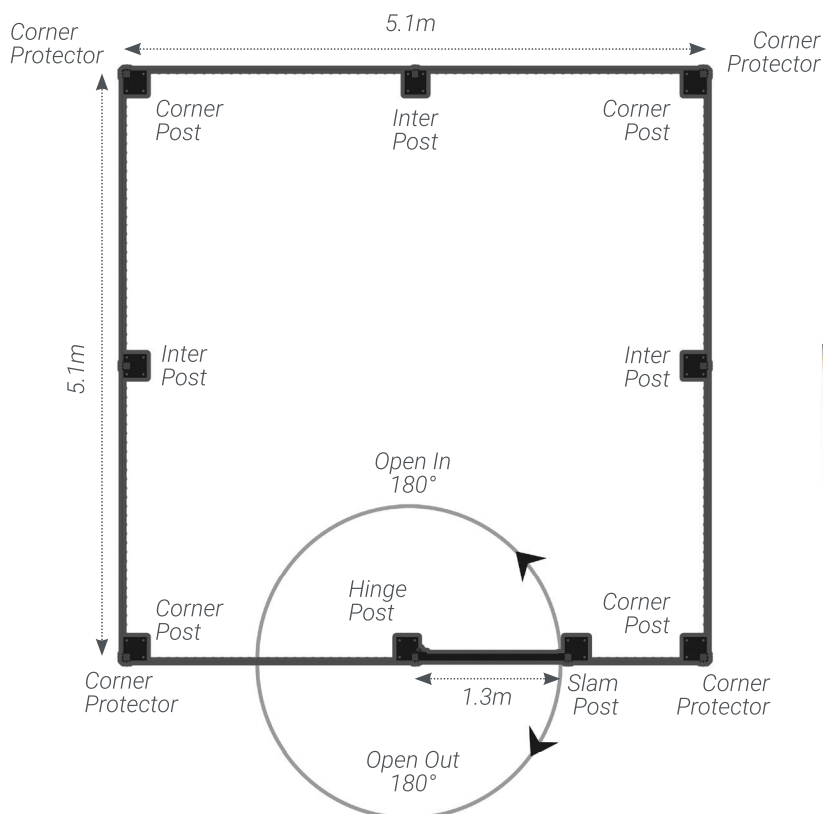

## Setup

- CraneGard to be installed on even concrete slab of approximately 200mm deep.
- Supplied kit covers area dimensions of 5.1m x 5.1m.


## Posts

- Posts to be installed with no more than 2530mm between post centres.
- Before installing the second gate post, install the Lintel bar, to ensure correct spacing for the gate and minimise need for adjustment of hinges and locks.



## Mesh & Clips

- Mesh to be hung from the top most wire on the hooked clips installed on the posts.
- Topmost clip should be installed on every post after hanging the mesh to secure mesh from slipping and falling.
- Do not leave the mesh panels hanging on the post hooks for longer than necessary to install the first clip.

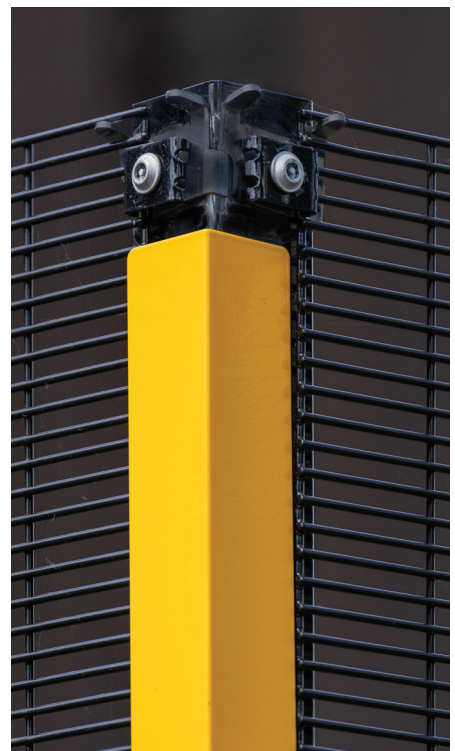

## Corner Protectors

- Corner protectors to be installed before fixings are installed on corner posts.
- For easier installation, the bottom most and 9th from the bottom clip on the corner posts should be installed securing mesh panels on both sides. Then the corner protector can be secured using remaining fixings, in such a way the clip is securing both the mesh panel and corner protector.



## Gate Hinges

- The self-closer hinges to be installed in pre-cut holes (5.5mm).
- Hinges can be installed in both inward and outward opening position.
- To be able to install the hinges in the outward opening position, the supplied mesh panel as well as the mesh panel on the gate leaf need to be trimmed to allow the hinge to rest flush and securely on the post and leaf.
- Do not install the gate opening outwards into high traffic areas.



## **Lock & Keep**

- Keep can be installed in inward and outward opening position using already inserted holes.
- Lock to be installed and adjusted using the instructions provided with the Lock.



## **Maintenance**

- Hinges and locking mechanism may require yearly maintenance such as greasing and oiling.
- Gatemaster locks 6 monthly in accordance with manufacturer's instructions. Remove keypads from the lock, spray inside and fixings with water displacer spray such as WD-40 or equivalent. Push each of the buttons and rotate the knob several times to make sure the lock works properly.

